

Changing Between WiFi and Ethernet

Applying configuration changes will update restart all networking services and reconfigure the docker containers. This means there **will** be downtime while this process takes place.

Sometimes you may need to change network connection type.

You can do this by accessing OMU while connected to the OnsiteConfig WiFi network and heading to Network Configuration. You will see the current configuration presented to you, and you can change connection method using the button provided at the top of the page.

Home Network Configuration System

Change To WiFi

IP Address

Subnet Mask

Gateway Address

Once you have entered the new configuration you can click Update in the bottom right. This will apply the configuration immediately.

Revision #1

Created 2 January 2024 13:30:13 by Luke Hebblethwaite

Updated 2 January 2024 13:35:58 by Luke Hebblethwaite